

# TROUBLESHOOTING


## The Status LED is not lit and the device is shown as disconnected on the app

*This means that the device is not connected to the Cloud*

- Check your **Internet connection**. If you cannot access the Internet with a different device on the same Wi-Fi network check with your ISP
- Check that the server is accessible at **<https://hamsystems.eu>** with your browser. If it is not, check again in 5 minutes or refresh the app / webpage
- Try restarting the device with the **Reset Button** and / or with removing and re-attaching the power. Wait for a few minutes
- Check if the device **is connected to your Wi-Fi router / Access Point**. If the device does not appear to be connected, then repeat the setup procedure and make sure that the Wi-Fi name and password are correct. The device may also need to be whitelisted depending on your network configuration. Note that the device and the app use the ports 9001 and 9002



## DinMeter3P

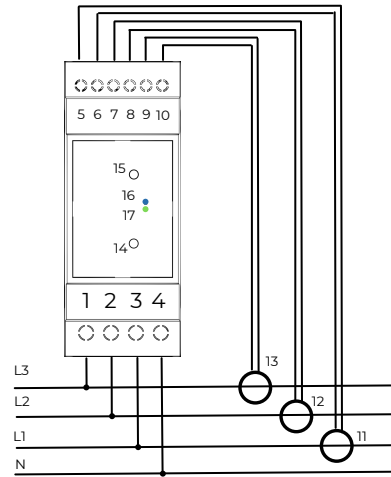

1. L3
2. L2
3. L1
4. N
5. CT3-
6. CT3+
7. CT2-
8. CT2+
9. CT1-
10. CT1+
11. Phase 1 Current Transformer clamp
12. Phase 2 Current Transformer clamp
13. Phase 3 Current Transformer clamp
14. Reboot button
15. Setup Button
16. Wi-Fi Connection Status LED
17. Cloud Connection Status LED

- **Internet** connection via **Wi-Fi**
- **Easy setup**
- Input **3x230VAC (3P4W), 0.02A**

- **Energy Measurement** with **Current Transformers**
- **Measure Active Powers, Voltages, Currents, Power Factors, Reactive Powers, Total Harmonic Distortions**

2 years warranty



# SETUP

In order to connect the device to your Wi-Fi network, you need to use the HAM Systems app. All the other features are also available on the Web on <https://hamsystems.eu>

1. **Connect the device according to the wiring diagram** on the first page. Put the Current Transformer around the wire you want to measure.
2. **Check your connections and power up the device**
3. **Open the HAM Systems app**. If you don't have an account create one
4. **Click on (+) button** on the devices list view on the APP
5. **Follow the instructions** on the app
6. If the Status LED is fully on and the device does not appear on the app, then you may also need **claim the device** to your account. Click on (+) and select the Claim Device option
7. You should now be able to **view data from the device on the app**

In case you are having difficulties, you can **try restarting the device** and repeating the steps.

**If you want to change the Wi-Fi network of your device**, you can do so by doing the steps 3-5. You don't have to re-claim your device in this case

## SAFETY WARNINGS

- Incorrect wiring of the device may lead to permanent damage to the device and / or sensors. Make sure your connections are correct before powering the device
- Do not disassemble the device. Doing so, voids the warranty
- In case of loss of network, you will not be able to monitor the real-time values of the device
- You should not rely on the device in such a way that puts human or animal lives at risk. You are responsible for checking the accuracy of the readings periodically

# USAGE

To use the device, visit our webapp at <https://hamsystems.eu> or search **HAM Systems** at the App Store / Play Store

Some features of the app:

- Control outputs from anywhere in the world via the Internet
- Set up time based schedules and timers
- View real time and historical output state
- Create interactions between other HAM Systems devices by using IF this THEN that style rules
- Secured communications with TLS
- Organize your devices with groups and floorplans

The **Setup button** is using during the setup process to pair the device to your Wi-Fi network  
The **Reset button** restarts the device, similar to power cycling

## TECHNICAL SPECIFICATIONS

<b>Environmental conditions</b>	<b>-10°C to 55°C</b>
<b>Input</b>	<b>3x230VAC (3P4W), 10mA 50Hz</b>
<b>Current Transformer Input</b>	<b>300mV/150mA max per input</b>
<b>Accuracy</b>	<b>Active Power/Energy 1%</b> <b>Reactive Power 2%</b>
<b>Dimensions</b>	<b>2 DIN Rail Modules</b>
<b>Enclosure Material</b>	<b>ABS</b>
<b>Communications protocol</b>	<b>Wi-Fi IEEE 802.11 b/g/n 2.4Ghz</b> <b>Bluetooth Low Energy</b>